

Firmware Upgrade Tool for TS400 Test Station


TS400 Firmware

Document Type:	Zipped Executable (EXE)
Version:	2.34
Release Date:	07/12/12
File Size:	60 KB

Requirements

Computer:	Any Pentium or equivalent with Windows 2000 or later with one available USB port.
GfG Hardware:	TS400 connection cable (distributed with TS400)

1. Download the TS400 firmware Upgrade Tool by clicking on the file name and save it. Make a note of the location to where it is saved.
2. Connect the test station to be upgraded directly to the computer with no other devices on the same line.
3. Using Windows Explorer (My Computer) navigate to the folder where the downloaded file was stored.
4. Double click on the file to start the Upgrade Tool.
The program does not require installation and can be executed directly.
5. Select the GfG COM port (this is usually the last one on the list) and click connect
If you select an incorrect COM port the communication cannot be established, then try another and repeat.
6. Click the [Start Update] button.
The progress bar on the screen should indicate to state of the process.
If not you selected the wrong COM port or otherwise do not have a connection or the drivers were installed incorrectly the connection will fail.
Do not disconnect the cable until the process is complete (approximately 60 seconds).

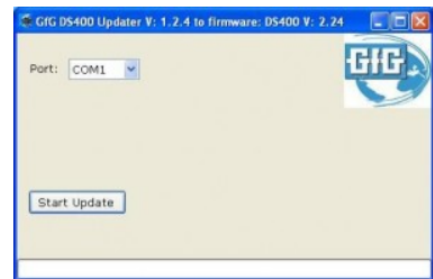

NOTE: If you receive a ".NET Framework Initialization Error" you may need to download .NET Framework software. It is available at this link:

<https://www.microsoft.com/en-us/download/details.aspx?id=17718>