POLYTECTOR III G999



Quick Reference Guide

Measurement method Sensor-dependent

Environmental conditions (operation)

Power supply NiMH battery module (5.2 V 2100 mAh; rechargeable)

Operating time

Max. 130 hours (Depending on equipment, use, sensors and age of the battery)

Housing


ATEX certification

Material:rubberized plasticDimensions:68 x 136 x 39 mm (W x H x D)Weight:max. 395 gProtection class:IP67

The device must not be charged or opened potentially explosive areas!

Charging contacts must always be kept clean! Dirt can be removed with a damp cloth (clear water).

Do not use solvents or cleaning agents!

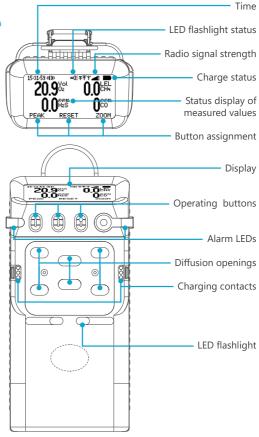

Polytector III G999CImage: Market Marke

Switch on	Press the right button for approx. 1 second.
Self test	After switching on, the visual and acoustic alarm, the displays of the sensors/gas types used incl. set alarm thresholds are tested. If the inspection periods for the bump test, adjustment and annual maintenance are exceeded, an information and warning message appears. Attention: If the date for the respective control period is exceeded, the following message appears: "Bump test/maintenance overdue" or "Recalibration needed". Press the middle button NEXT to acknowledge the message and have the device tested or checked at the next opportunity.
Switch off	Press the right button for approx. 5 seconds. Release the button again after the end of the countdown (the display only shows "Switch off").

Alarm type	Sensors	Alarm levels	Description		
Alarm type					
Current value (CV)	» Oxygen » flammable gases	3 3	Are triggered immediately when the current gas concentration exceeds or falls below (O_2) a specified value. The current value alarms can be set		
	» toxic gases	2	individually.		
Short-term exposure value (STEL)	» toxic gases	1	The short-term exposure value (STEL) shows the average value of the last 15 minutes.		
Long-term exposure value (TWA)	» toxic gases	1	The long-term exposure value (TWA) monitors exposure over 8 hours.		
Rotating the display by 180°	Briefly press the left and right buttons simultaneously to rotate the display by 180°. This makes it easier to read the display when the device is worn on the body.				
Zoom display of STEL, TWA, current and maximum value	To view individual values in the zoom display, briefly press the right button (2001) . By briefly pressing the right button several times, all sensors and the battery charge status are displayed in succession. By pressing and holding the right button (2001) in the zoom display, you can switch to the detailed view to additionally display the maximum, short-term and long-term values.				
Display of PEAK value » activate	In PEAK mode, maximum values (O ₂ = minimum value) are permanently displayed. Pressing the left button FEAK activates PEAK mode. The PEAK symbol T appears in the display. In the zoom display, the PEAK value is then shown in the upper left corner instead of the max. value (measured since PEAK was activated).				
» reset	If EEEE is pressed in PEAK mode or in the zoom display, the PEAK memory is reset to the current gas concentration.				
» deactivate	Pressing FEAK again deactivates PEAK mode.				
Flashlight or manual alarm	Pressing and holding the left button EEAS activates one of two possible modes: the LED flashlight or the manual alarm. The function is selected in advance in the system options menu of the service menu. LED flashlight: Press the left button for 3 seconds = on. Press the left button briefly = off. Manual alarm: Press the left button for 3 seconds to activate the alarm. The question "Are you OK?" appears. Pressing the left button NO holds the alarm. Pressing the right button YES ends the alarm. The query can be opened again at any time by pressing the				
	middle button				
Main menu		be set. There a (= sele	le button (program) opens the main menu. Here, program re various submenus to choose from in the main menu: ction of the operation location) ction of employee)		
	 » AutoCal » Service menu » Sensor-Overvie » System-Information 	(= zero (= para ew (= over ation (= type	point adjustment with ambient air (AIR) or test gas (GAS)) imeter settings) view of existing sensors) e, serial number, firmware version, radio setting) re explained by information in the display above them.		
Access code			essible via an access code. It prevents important functions from by unauthorised persons. There is no alarm in service mode.		
	For further inform	mation on the	setting options, please refer to the operations manual.		

GfG – Gesellschaft für Gerätebau mbH

Klönnestraße 99 · 44143 Dortmund · Germany

Phone:	+49 231	56400-0
Fax:	+49 231	56400-895

215-100.20_QRG_G999.pdf · Stand 04.11.2021

